


Manual de Usuario

NX-LZ32

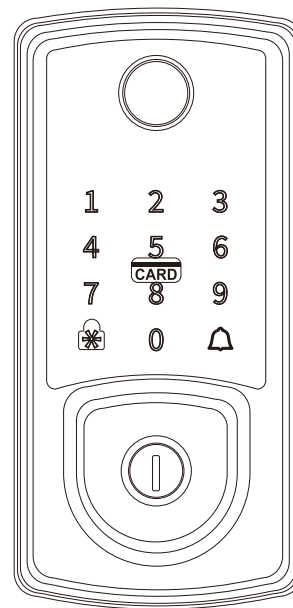

*Para mejorar la calidad del producto, actualizamos continuamente sus funciones y diseño sin previo aviso.

Tabla de Contenido

1. Precauciones de Seguridad	1	3. Guía de Uso	11
2. Guía de Instalación	2	Descripción de partes del producto	11
Verificación de la lista de producción	2	Definiciones de funciones y terminología	12
Tabla de parámetros previa a la instalación	3	Guía rápida para el primer uso	13
Diagrama de estructura de montaje	4	Restablecer y activar la cerradura	14
Verificación del grosor y sentido de apertura	5	Registro de administrador	14
Perforación para la cerradura	6	Agregar y eliminar usuarios	14
Instalación del cuerpo de la cerradura	6	Conectar la cerradura inteligente a la App	15
Instalación del panel exterior y soporte	7	Programación de funciones del menú	16
Cableado y fijación del panel interior y soporte	8	Instrucciones de métodos de apertura	17
Instalación de baterías	9	Problemas comunes y soluciones	18
Instalación de contra y caja de cerradero	9		
Prueba de apertura con llave mecánica	10		

1. Precauciones de Seguridad

Advertencias

- Antes de usar esta cerradura inteligente, lea y comprenda cuidadosamente todas las instrucciones. Los daños derivados de no seguirlas no estarán cubiertos por la garantía.

Seguridad de uso

- Use únicamente accesorios y piezas especificados por nuestra empresa. No use piezas no originales o no recomendadas, ya que puede anular la garantía.
- No desmonte el producto por la fuerza; podría activar la alarma o causar daños. Para instalación o reparación, solicite a un técnico profesional.
- No raye el sensor de huella con objetos afilados y evite sustancias corrosivas; pueden dañar el recubrimiento protector y causar fallas permanentes.
- No cuelgue objetos en la manija, ya que puede afectar el funcionamiento normal de la cerradura.
- Para limpiar el producto, use un paño suave y limpio.
-

Gestión de contraseñas y llaves

- Después de la instalación y prueba, cambie la contraseña de administrador predeterminada en el primer uso. Guarde las llaves mecánicas en un lugar seguro y no revele la contraseña.

Seguridad de baterías


- Use solo las baterías incluidas o el modelo especificado. No retire las baterías mientras el dispositivo esté funcionando.
- Cuando la cerradura indique batería baja, reemplace todas las baterías de inmediato y confirme la polaridad correcta.
- Antes de reemplazar baterías, asegúrese de que la puerta esté abierta para evitar bloqueo accidental. Se recomienda que lo realice Nexido o un servicio autorizado.
- No coloque baterías cerca del fuego ni cortocircuite los terminales con objetos metálicos, ya que podría causar explosión.
- No alimente este producto con fuentes de emergencia que no cumplan las normas de seguridad.

Eliminación de productos y baterías usados

- Conozca y cumpla las normas locales de reciclaje para productos electrónicos. No deseche baterías usadas con basura doméstica.
- Deseche correctamente las baterías usadas para evitar daños al medio ambiente y a la salud.

2. Guía de Instalación

Verificación de la lista de producto

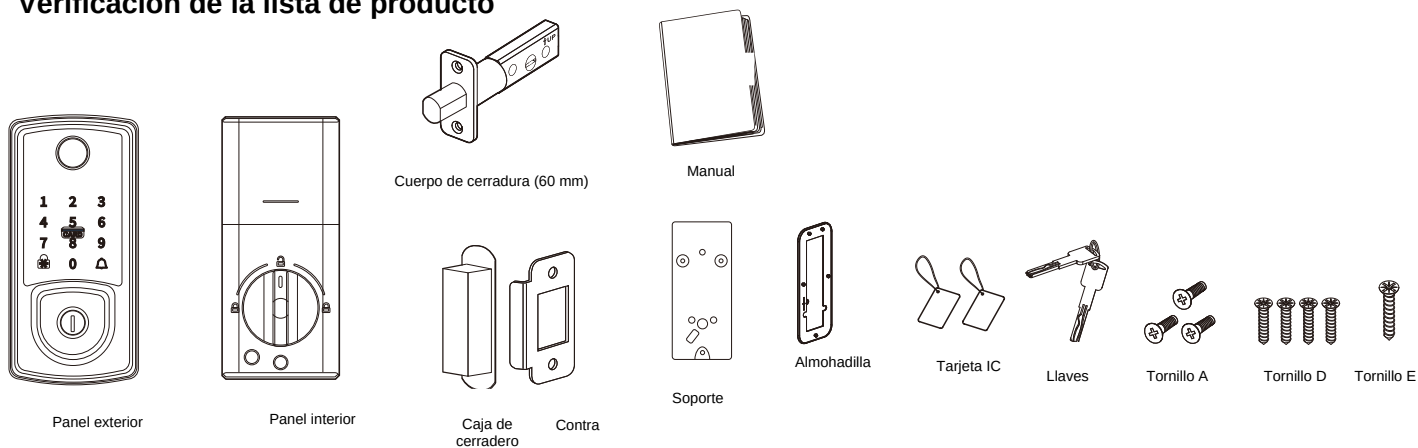

Grosor de puerta	Tornillo B	Tornillo C
35 a 50 mm	 4×30 mm	 4×45 mm
51 a 60 mm	 4×35 mm	 4×50 mm

Nota: El kit estándar incluye tornillos y eje cuadrado para puertas de 35 a 60 mm de grosor. Seleccione la combinación adecuada según el grosor de la puerta.

Tabla de Parámetros Previa a la Instalación

Especificación	Parámetro
Grosor de puerta	35-60 mm
Tipo de cuerpo	Pestillo sencillo estándar 60 mm
Tamaño de eje cuadrado	7.8 × 7.8 × 65 mm
Especificación de tornillo	Tornillo B (PM4×45 mm) para grosor 35-50 mm
Tipo de batería	4 baterías alcalinas AA (no incluidas)
Alimentación de emergencia	Puerto USB (alimentación temporal con batería agotada)
Métodos de apertura	Huella / contraseña / tarjeta IC / llave mecánica / App remota
Puertas compatibles	Madera / metal / seguridad (verificar ajuste del cuerpo)


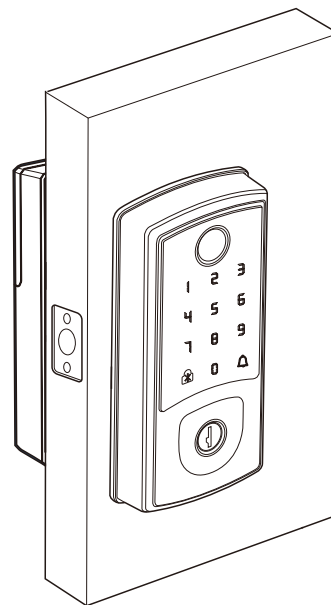


Diagrama de Estructura de Montaje

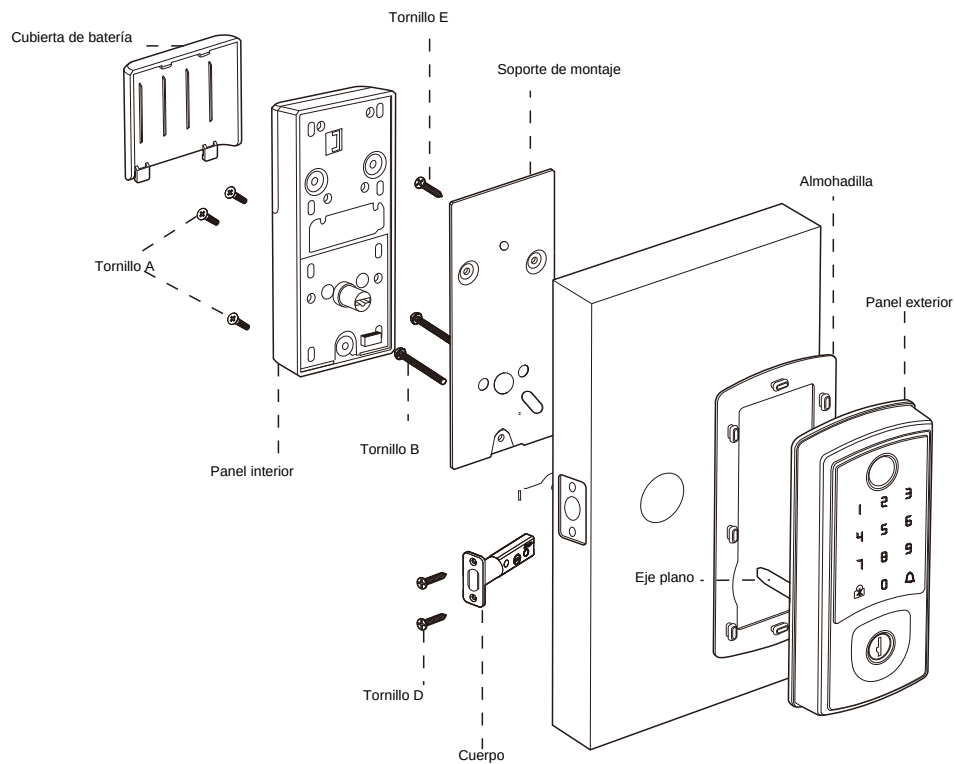



Grosor de Puerta y Sentido de Apertura

A. Medición del grosor de la puerta

Mida el grosor de la puerta y seleccione el eje cuadrado y el cuerpo de cerradura adecuados como se muestra.

B. Sentido de apertura de la puerta


El sentido de apertura determina la posición de la manija. El diagrama muestra la relación entre el sentido de la puerta y su posición desde el exterior.

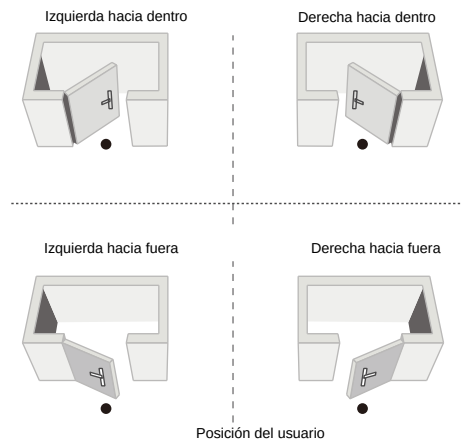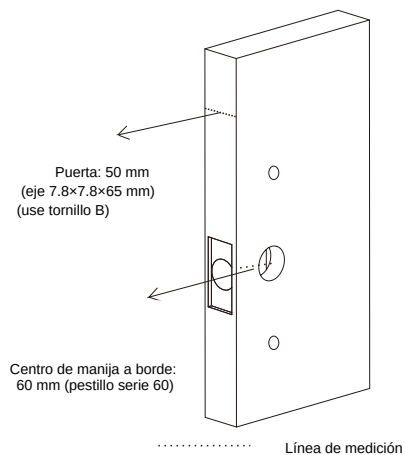

Perforación para la Cerradura

1. Coloque la plantilla de instalación a la altura deseada de la manija en la puerta.
2. Marque todas las posiciones de perforación (ver diagrama).
3. Perfore en las posiciones marcadas.

Nota: Use herramientas profesionales del tamaño adecuado para el cuerpo de cerradura y los pernos.

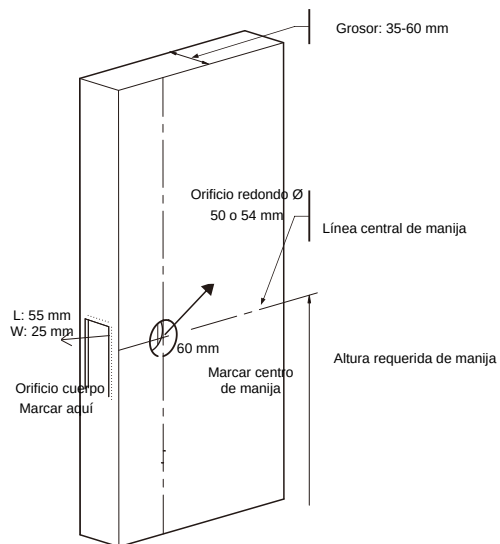

Instalación del Cuerpo

1. Inserte el cuerpo en el orificio, usando el tornillo D.
2. Apriete el tornillo D para fijar el cuerpo de la cerradura (vea Fig. 1 y Fig. 2).



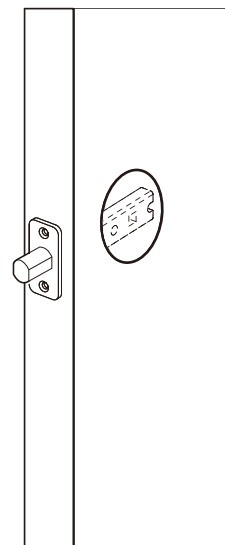


Fig. 1

Fig. 2

Instalación del Panel Exterior


1. Coloque el panel exterior y el eje plano en el cuerpo de la cerradura.
2. Pase el cable a través del cuerpo de la cerradura (ver diagrama).

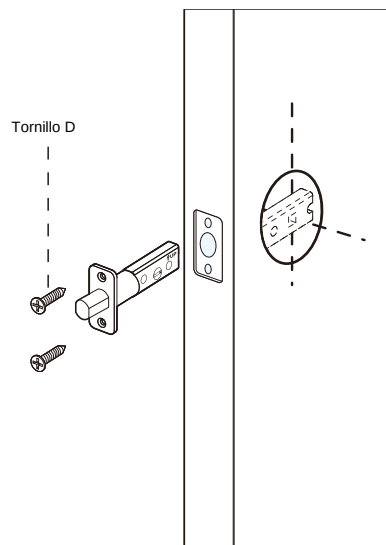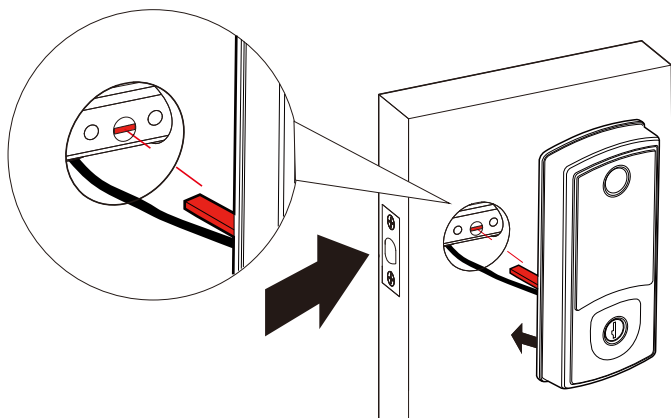

Nota: Asegúrese de que la cerradura esté desbloqueada.

Instalación del Soporte de Montaje


1. Fije el soporte de montaje a la puerta y pase el cable del panel exterior por el soporte.
2. Fije con tornillo B en el panel exterior y apriete el tornillo E en la puerta de madera. Nota: tornillo B para puertas de 35-50 mm. Para puertas de más de 50 mm use tornillo C.

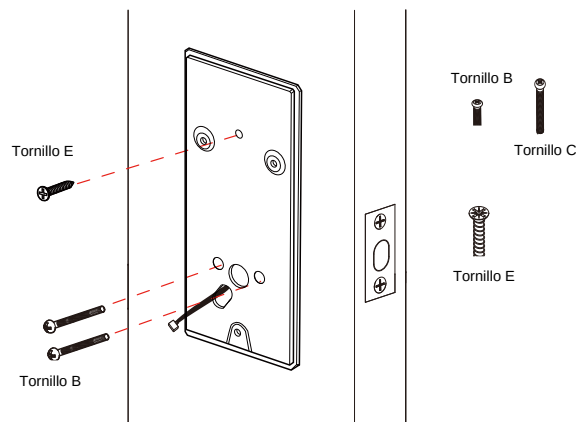


Cableado y Fijación del Panel Interior y Soporte

1. Conecte el cable al panel interior (Fig. A).
2. Alinee el panel interior con el eje plano del panel exterior, luego fíjelo al soporte de montaje (Fig. B).
3. Use el tornillo A para apretar el panel interior al soporte (Fig. C).


A

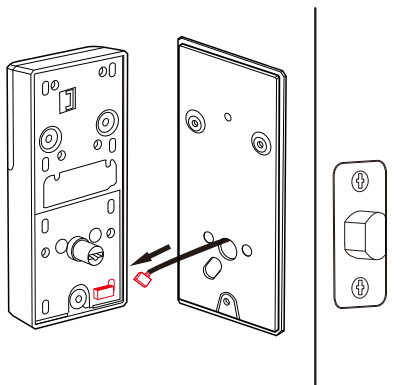

B

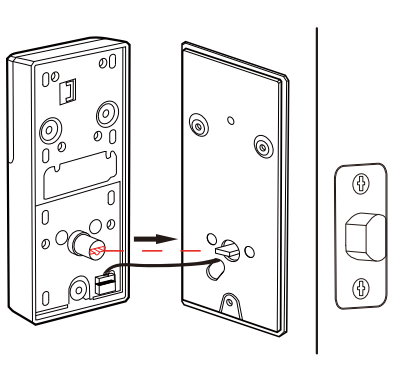

C

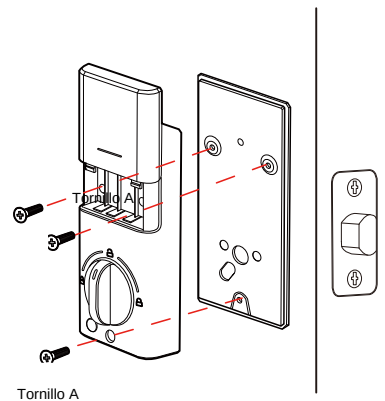

Instalación de Baterías

Instale cuatro baterías alcalinas AA como se muestra en la Fig. 1 y luego cierre la cubierta de baterías.

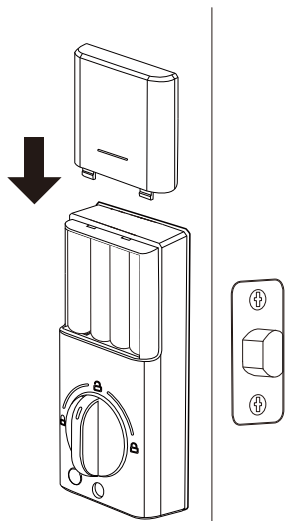


Fig. 1

Instalación de Contra y Caja

1. Perfore el rebaje para la caja: profundidad 15 mm, longitud 60 mm (Fig. 2 y 3).

2. Contra: ancho 26 mm, longitud 60 mm (Fig. 2).

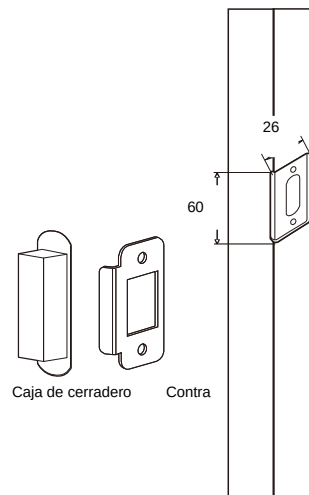


Fig. 2

Prueba de Apertura con Llave Mecánica

3. Coloque la caja en el rebaje, cúbrala con la contra y apriete con el tornillo D (Fig. 3).

Nota: Asegúrese de que la contra esté paralela al cuerpo de la cerradura para evitar que el pestillo no bloquee.

Inserte la llave en la bocallave, gire 90° en sentido antihorario y luego presione la manija para retraer el pestillo.



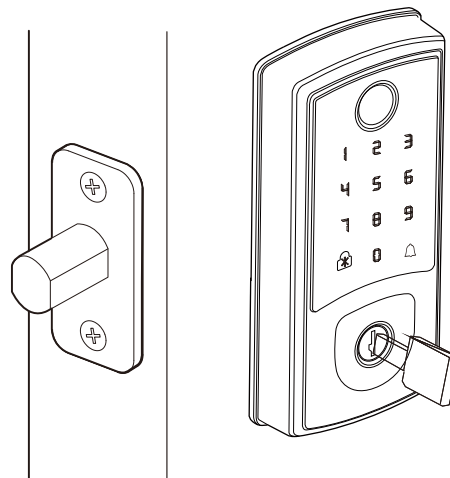


Fig.3

3. Guía de Uso

Descripción de Partes del Producto

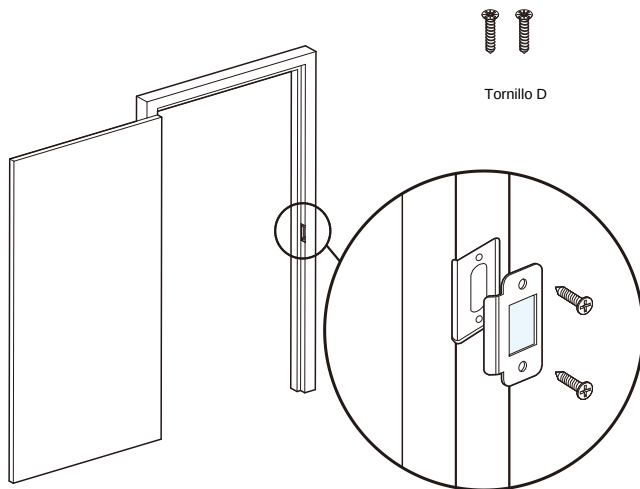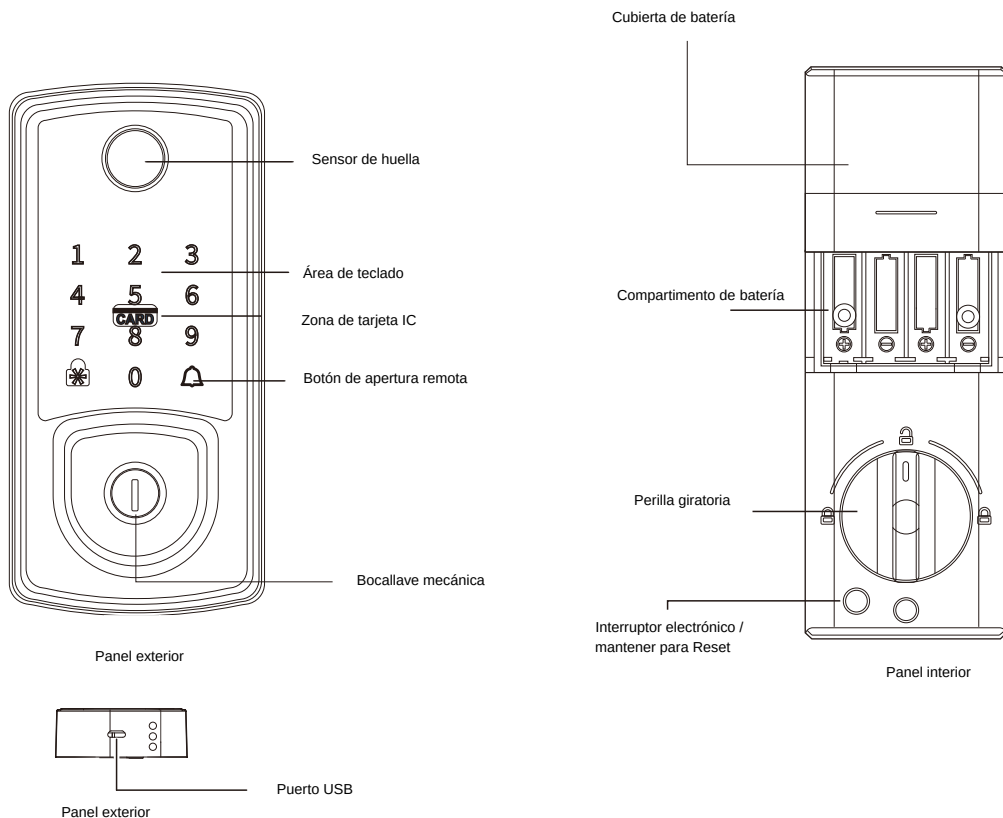

Definiciones de Funciones y Terminología

1. Nota: Cada usuario puede registrar una huella, una contraseña o una tarjeta.
2. Inicialización: Todos los datos de usuarios registrados se eliminarán y se restaurarán los ajustes de fábrica.
3. Roles de usuario: La cerradura puede ser controlada por dos roles: Administrador y Usuario general. El administrador tiene acceso al menú y puede abrir la puerta. El usuario general solo puede abrir la puerta.
4. Contraseña virtual: Para proteger la contraseña, el usuario puede introducir dígitos aleatorios antes o después de la contraseña real. El total no debe superar 32 dígitos, incluida la contraseña. Ejemplo: si la contraseña correcta es 123456, pueden usarse 89123456807, 1234562363, 389123456, etc.
5. Registro de respaldo: Después del registro inicial, el usuario puede cambiar la contraseña y la tarjeta registradas, o continuar registrando datos de huella restantes.
6. Modo siempre abierto: Mantiene la puerta desbloqueada en todo momento, adecuado para salas de reuniones y lugares sin restricción de acceso. Para desactivarlo, desbloquee una vez con huella, contraseña o tarjeta.
7. Advertencia de batería baja: Cuando la batería esté baja y el dispositivo esté bloqueado, el sistema indicará "Batería baja, reemplácela". Si se usan baterías con bajo nivel, la sensibilidad del teclado puede verse afectada.
8. Cambio de idioma: En estado predeterminado de fábrica (sin administrador registrado), ingrese 555666880# para inglés, 555666886# para español.

Guía Rápida para el Primer Uso

1. Después de la instalación, inserte 4 baterías alcalinas AA para encender la cerradura.
2. Mantenga presionado el botón Reset aproximadamente 3 segundos hasta escuchar un pitido; luego presione [#] para confirmar el restablecimiento de fábrica.
3. Toque el teclado para activar la cerradura, presione [* + #] para entrar al menú e inicie sesión con la contraseña predeterminada 123456. Cambie esta contraseña inmediatamente después de la primera activación.
4. Registre la primera huella o contraseña de administrador, y luego agregue los usuarios normales requeridos.
5. Con la puerta abierta, pruebe cada método de apertura uno por uno: huella, contraseña, tarjeta IC, llave mecánica y apertura remota por App, para confirmar el funcionamiento antes de cerrar la puerta.



Restablecer la Cerradura

Mantenga presionado Reset durante 3-5+ segundos hasta escuchar el aviso de voz; luego presione [#] para confirmar el restablecimiento de fábrica.

Activar la Cerradura

Después de insertar baterías, toque el teclado con la mano o un dedo. Los números se encenderán, confirmando la activación.

Registrar Administrador

Presione [* + #] e ingrese 123456# para acceder al menú. Luego presione 1 y nuevamente 1 para agregar la primera huella o contraseña de administrador.

Agregar Usuario Normal

Presione [* + #] e ingrese huella o contraseña del administrador. Después de verificar, entre al menú, presione 1 y luego 2 para agregar huella, contraseña o tarjeta de usuario normal.

Eliminar Usuario

Presione [* + #] e ingrese huella o contraseña del administrador. Después de verificar, entre al menú, presione 2 y luego 3 para seleccionar y eliminar usuarios. Nota: se requiere ID de usuario.

Programación del Menú

Presione [* + #] e ingrese huella o contraseña del administrador para acceder a la interfaz de programación.

Conectar la Cerradura Inteligente a la App

1. Busque "Tuya Smart" en la tienda de aplicaciones y descárguela en su teléfono. Abra la app e inicie sesión. Si no tiene cuenta, regístrese con su número o correo electrónico.
2. Para emparejar el dispositivo, conecte su teléfono a una red Wi-Fi segura y acérquelo a la cerradura.



Pasos de configuración

Paso 1: Habilitar Wi-Fi en la cerradura

1. En la cerradura, presione [* + #] e ingrese la huella o contraseña del administrador. Después de verificar, presione 4 y luego 2 para Configuración de red inteligente.


Paso 2: Conectar vía App

1. En la app, toque "+" en la esquina superior derecha de la pantalla principal para ir a "Agregar dispositivo".
2. Seleccione [Sensor de seguridad] -> "Cerradura de puerta (Wi-Fi)" -> red Wi-Fi 2.4GHz -> ingrese contraseña -> [Siguiente].

Nota: Tuya Smart NO admite Wi-Fi 5GHz. Debe usar Wi-Fi 2.4GHz.


3. Después de emparejar, use la app para apertura remota, registros de apertura y gestión de permisos.

Programación de Funciones del Menú

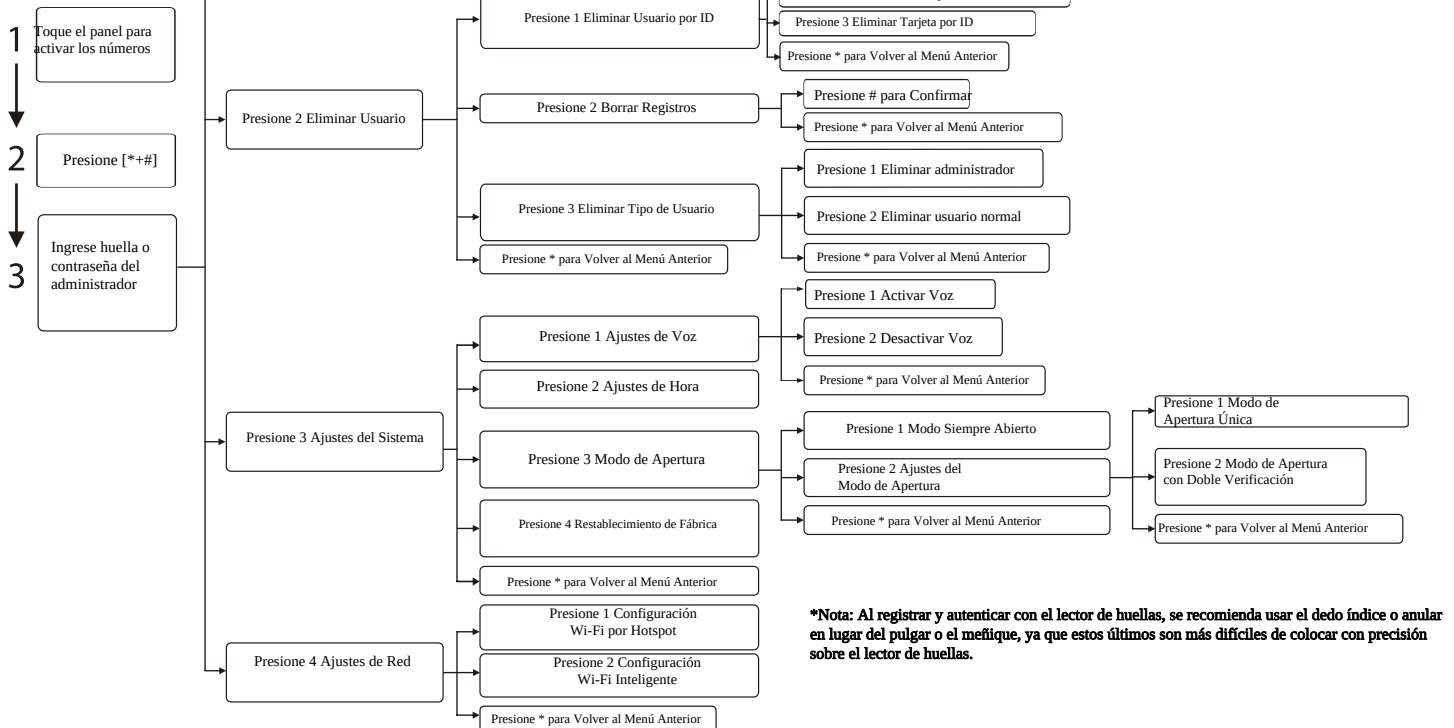


Instrucciones de los Métodos de Apertura

Abrir la Puerta con Huella:




Abrir con contraseña:

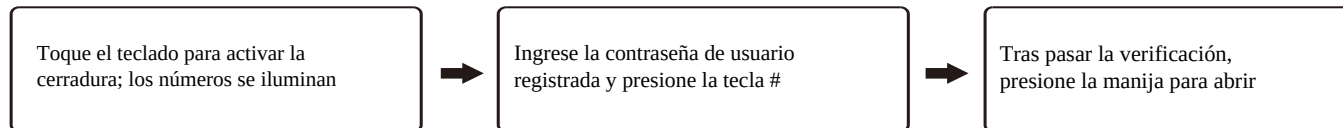


Nota: Para evitar la filtración de la contraseña, puede ingresar dígitos aleatorios antes o después de la contraseña real. La longitud máxima de la contraseña aleatoria es de 32 caracteres (incluida la contraseña).

Abrir la puerta con tarjeta IC:



Solicitar apertura remota vía APP:



Problemas Comunes y Soluciones


Problema	Solución
La cerradura no responde	Verifique la polaridad y el nivel de carga de las pilas; o alimente temporalmente por el puerto USB e intente abrir.
Falla el reconocimiento de huella	Limpie el sensor de huellas, asegúrese de que el dedo cubra toda el área de reconocimiento e intente registrarla de nuevo.
Olvidó la contraseña de administrador	Mantenga presionado el botón de reinicio para restaurar la configuración de fábrica (Nota: se borrarán todos los datos de usuario).
La App no puede completar el emparejamiento	Asegúrese de que el teléfono esté conectado a Wi-Fi de 2.4GHz (5GHz no es compatible); con Bluetooth activado; mantenga el teléfono cerca de la cerradura.
Pilas agotadas, no se puede abrir la puerta	Use la llave mecánica para abrir la puerta, o alimente temporalmente por el puerto USB para abrir con contraseña/huella y luego reemplace las pilas.

Servicio al Cliente por WhatsApp: +52 56 1105 8532

Sitio Web Oficial: www.nexido.com

User Manual

NX-LZ32

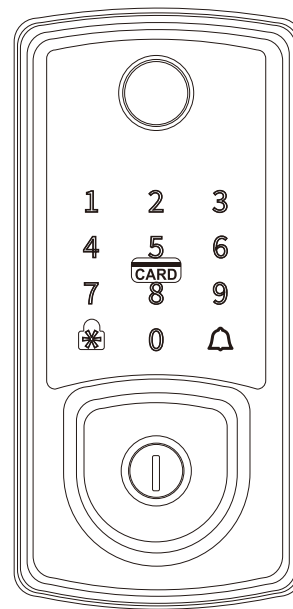

*To improve product quality, we continuously update features and design without prior notice.

Table of Contents

1.Safety Precautions	1	3.User Guide	11
2.Installation Guide	2	Product Parts Description	11
Product List Verification	2	Function Definitions and Terminology Description . . .	12
Pre-installation Parameter Table	3	Quick Start Guide for First Use	13
Assembly Structure Diagram	4	Resetting and Activating the Lock	14
Door Thickness and Opening Direction Verification .	5	Registering Administrator	14
Latch Bolt and Handle Direction Adjustment	6	Adding and Deleting Users	14
Lockset Hole Drilling	7	Connecting the Smart Lock to the App	15
Lock Body Installation	7	Menu Function Programmin	16
Outer Panel &Mounting Bracket Installation	8	Unlocking Method Instructions	17
Inner Panel &Mounting Bracket Wiring and Fixing . .	8	Common Problems and Solutions	18
Battery Installation	9		
Strike Plate & Strike Box Installation	9		
Mechanical Key Unlocking Test	10		

1. Safety Precautions

Warnings

- Before using this smart lock, please carefully read and understand all instructions. Damage resulting from failure to follow these instructions will not be covered under warranty.

Usage Safety

- It is recommended to use only the accessories and parts specified by our company. Do not use non-genuine parts or parts not specifically recommended by our company, as this may void the warranty.
- Do not forcibly disassemble the product, as this may trigger the alarm or cause damage. For installation or repair, please have a professional technician follow proper procedures.
- Do not scratch the fingerprint sensor with sharp objects, and avoid contact with corrosive substances, as this may damage the protective coating of the sensor and cause permanent failure.
- Do not hang objects on the door handle, as this may affect the normal operation of the lock.
- When cleaning the product, use a clean, soft cloth.

Password and Key Management

- After installation and commissioning, change the factory default administrator password upon first use. Keep the mechanical keys in a safe place and never disclose your password information carelessly.

Battery Safety

- Use only the batteries included with this product or the specified model. Do not remove the battery while the device is operating.
- When the lock issues a low battery alert, replace all batteries promptly and ensure they are installed in the correct direction.
- Before replacing batteries, ensure the door is in an open position to avoid accidental locking during the replacement process. It is also recommended that replacement be performed by Nexido or its authorized service center professionals.
- Do not place batteries near fire sources, and do not short-circuit the battery terminals with metal objects, as this may cause explosion.
- Do not power this product with emergency power supplies that do not comply with safety regulations.

Disposal of Used Products and Batteries


- Please familiarize yourself with local recycling classification regulations for electronic products and comply with relevant laws. Do not dispose of used batteries with ordinary household waste.
- Dispose of used batteries properly to avoid adverse effects on the environment and human health.

2. Installation Guide


Product List Verification



Outer Panel

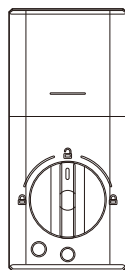


Inner Panel

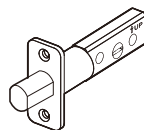

Lock Body (60mm)



User Manual

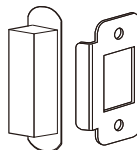

Strike Box
Strike Plate



Bracket



Rubber Pad



IC card



Keys



Screw A



Screw D

Screw E




Door Thickness	Screw B	Screw C
35 to 50mm	4×30mm 	4×45mm 
51 to 60mm	4×35mm 	4×50mm 


Note: The standard kit includes screws and square spindle for doors 35?60mm thick. Select the appropriate combination based on your door thickness.

Pre-Installation Parameter Table

Specification	Parameter
Door Thickness	35-60mm
Lock Body Type	Standard 60mm single latch
Square spindle Size	7.8 × 7.8 × 65mm
Screw Specification	Screw B (PM4×45mm) for door thickness 35?50mm
Battery Type	4× AA alkaline batteries (not included)
Emergency Power	USB port (temporary power when battery is depleted)
Unlock Methods	Fingerprint / Password / IC Card / Mechanical Key / App Remote
Compatible Door Types	Wooden / Metal / Security doors (verify lock body fit)

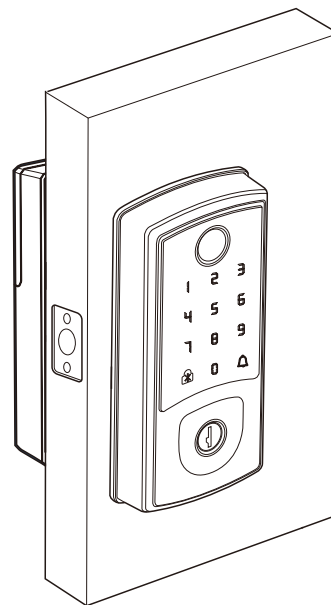

Assembly Structure Diagram

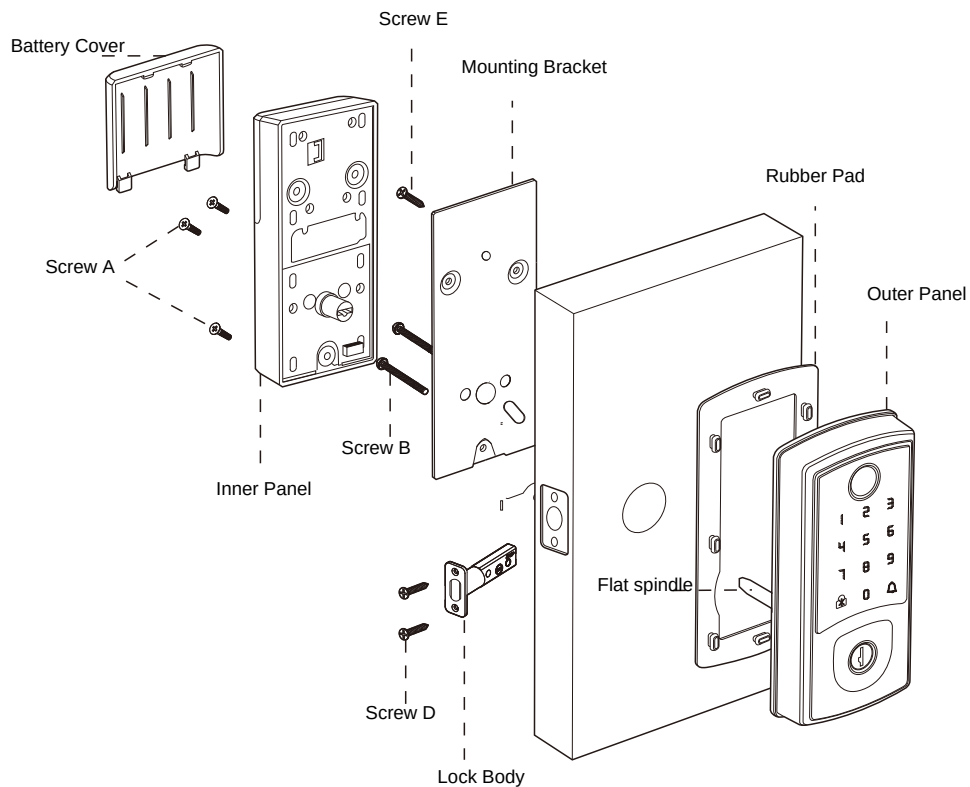



Door Thickness & Opening Direction

A. Door Thickness Measurement

Measure the door thickness and select the appropriate Square Spindle and lock body as shown.

B. Door Opening Direction


The opening direction determines the handle position. The diagram shows the relationship between door direction and your position outside.

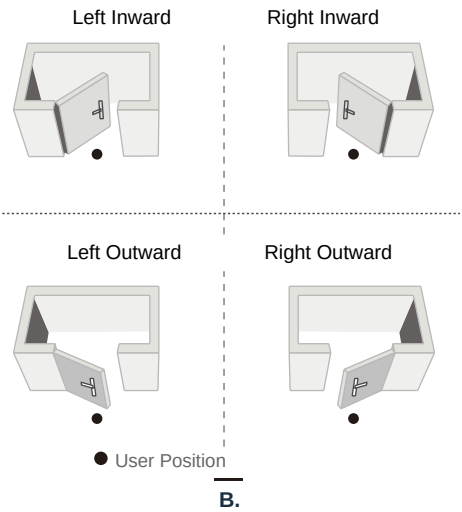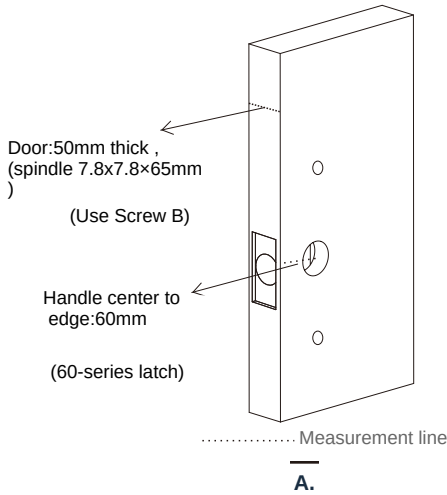

Lockset Hole Drilling

1. Place the installation template at the desired handle height on the door.
2. Mark all drilling positions (see diagram below).
3. Drill holes at the marked positions.

Note: Use professional tools sized for the lock body and studs.

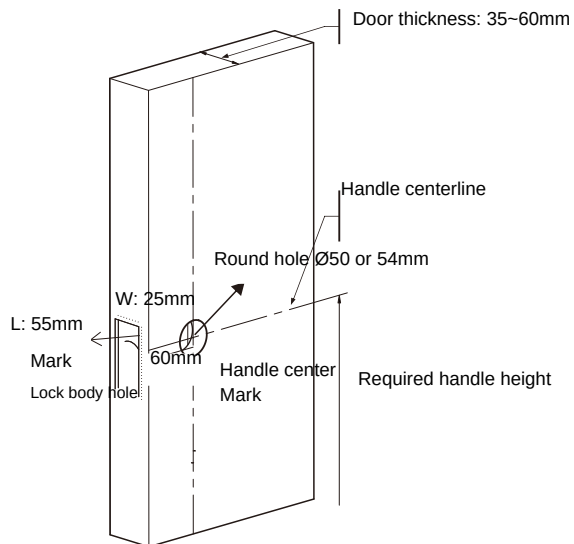

Lock Body Installation

1. Insert lock body into drilled hole, using Screw D.
2. Tighten Screw D to secure the lock body (see Fig. 1 & Fig. 2 below).


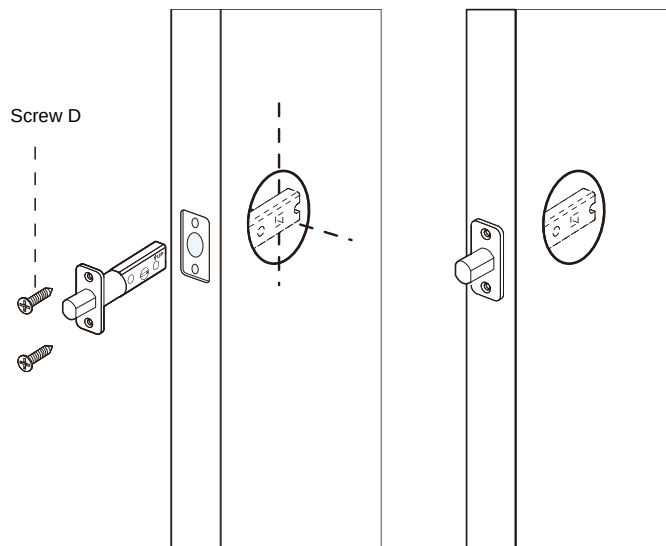


Fig. 1

Fig. 2

Outer Panel Installation

1. Fit the outer panel and flat spindle onto the lock body.
2. Thread the cable through the lock body (see diagram).

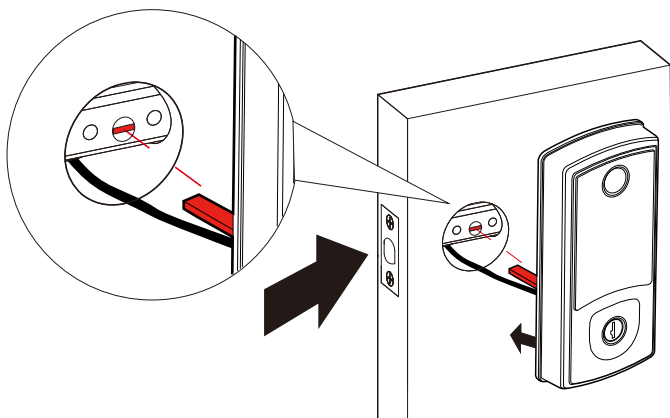


Note: Make sure the lock is unlocked

Mounting Bracket Installation

1. Secure the mounting bracket to the door and thread the outer panel cable through the bracket.
2. Fasten with Screw B into the outer panel, and tighten Screw E into the wood door.


Note: Screw B for 35?50mm doors. For doors over 50mm use Screw C.

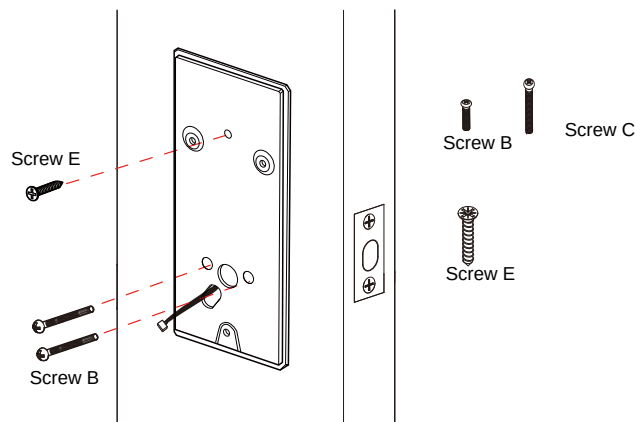


Inner Panel & Mounting Bracket wiring and Fixing

1. Connect the cable to the inner panel (Fig. A).
2. Align the inner panel with the outer panel flat spindle, then fix the inner panel to the mounting bracket (Fig. B).
3. Use Screw A to tighten the inner panel to the bracket (Fig. C).


A

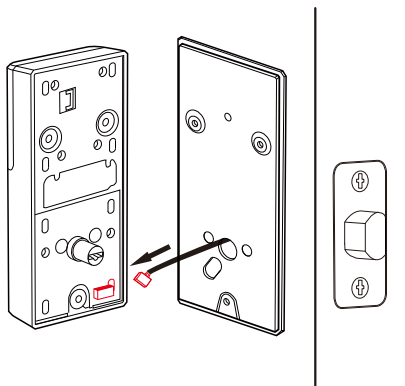

B

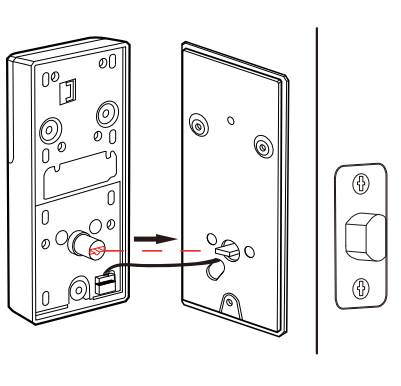

C

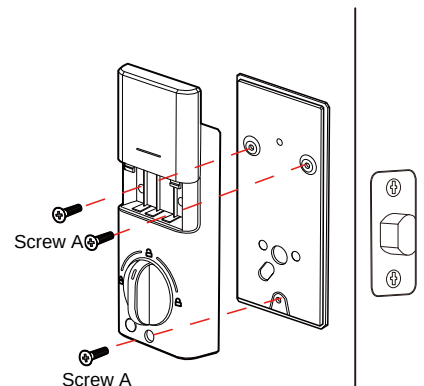

Battery Installation

Install four AA alkaline batteries as shown in Fig. 1, then close the battery cover.

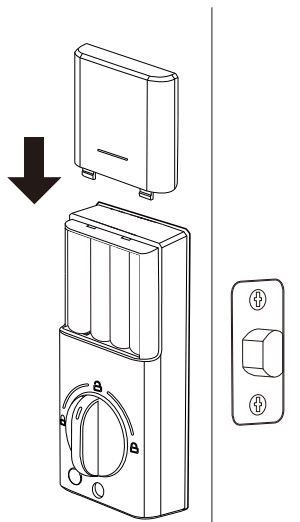


Fig. 1

Strike Plate & Strike Box Installation

1. Drill recess for strike box: depth 15mm, length 60mm (Fig. 2 & 3).
2. Strike plate: width 26mm, length 60mm (Fig. 2).

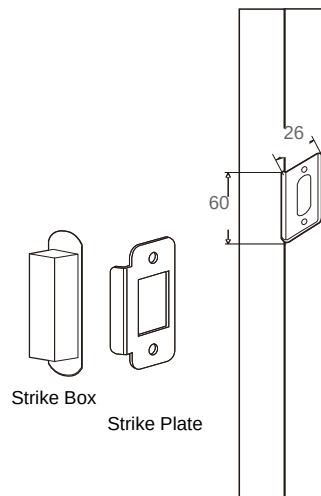


Fig. 2

3. Place the strike box in the recess, cover with the strike plate, and tighten with Screw D (Fig. 3).

Note: Ensure the strike plate aligns parallel with the lock body to prevent the latch from failing to lock.


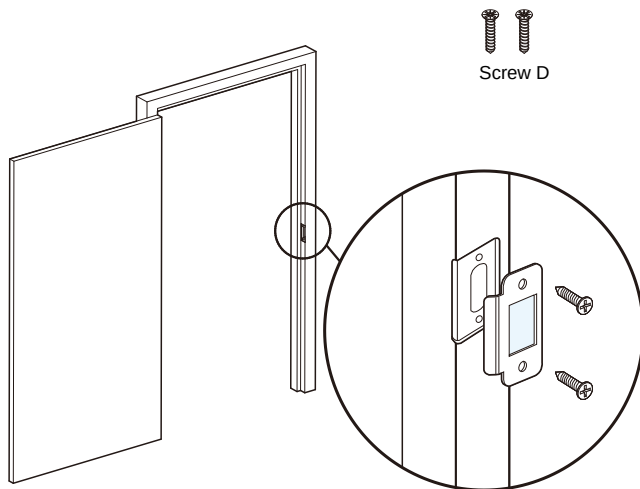


Fig. 3




Mechanical Key Unlocking Test

Insert the key into the keyhole, rotate 90° counter-clockwise, then press the handle down to retract the latch.

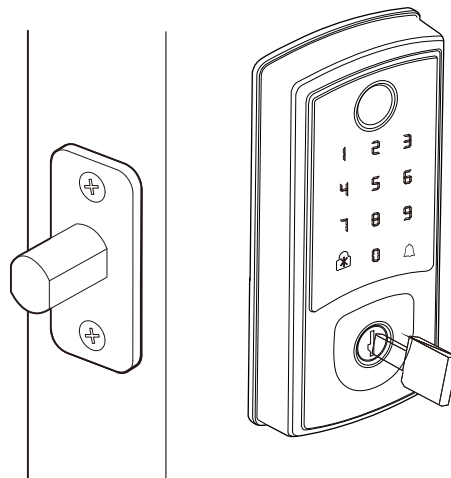

3. User Guide

Product Parts Description

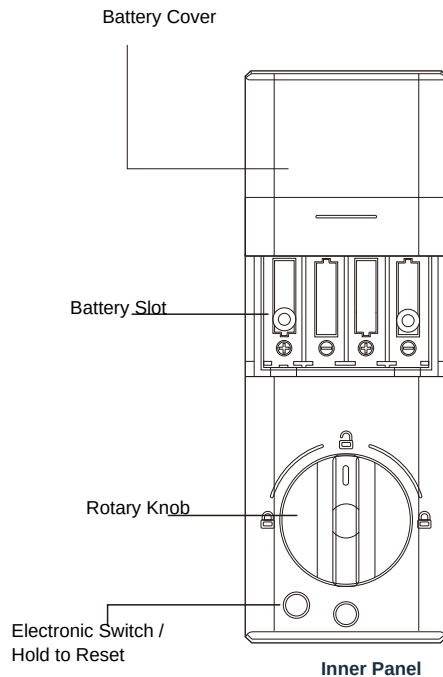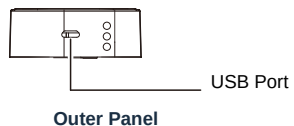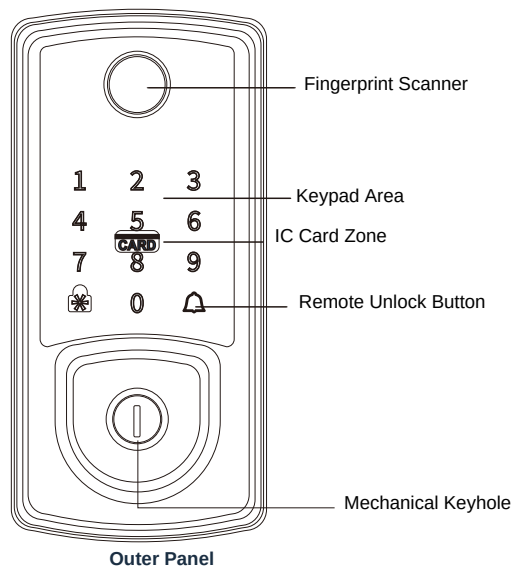

Function Definitions and Terminology Description

1. Note: Each user can register one fingerprint, one password, or one card.
2. Initialization: All registered user data will be deleted and restored to factory settings.
3. User Roles: The lock can be controlled by two user roles: Administrator and General User. The administrator has menu access permission and can unlock the door. The general user cannot perform the above operations and can only unlock the door.
4. Virtue Password: Users can protect their password by entering random digits before or after the actual password. The total number of digits entered shall not exceed 32 (including the password itself). For example, if the correct password is 123456, random passwords can be 89123456807, 1234562363, 389123456, etc.
5. Backup Registration: Users can change the registered password and card information after the initial registration, or continue to register the remaining fingerprint data.
6. Always Open Mode: This function keeps the door unlocked at all times, suitable for conference rooms and places without access restrictions. To disable Always Open Mode, simply unlock once using fingerprint, password, or card.
7. Low Battery Warning: When the battery is low and the device is in a locked state, the system will prompt "Low battery, please replace the battery." If batteries with the same low power level are used, keyboard response sensitivity will be affected.
8. Language Switch: In the factory default state (with no admin registered), enter **555666880#** for English, enter **555666886#** for Spanish.

Quick Start Guide For First Use

1. After installation, insert 4 AA alkaline batteries to power on the lock.
2. Press and hold the Reset button ~3 seconds until you hear a beep,
then press [#] to confirm factory reset.
3. Touch the keypad to wake the lock, press [*+#] to enter the menu, and log in with the default password 123456. Change this password immediately after first activation.
4. Register the first administrator fingerprint or password, then add the required regular users.
5. With the door open, test each unlocking method one by one — fingerprint, password, IC card, mechanical key, and Appremote unlock — to confirm proper operation before closing the door.



Resetting the Lock

Reset the Lock (Factory Reset): Press and hold the Reset button for 3–5+ seconds until you hear the voice prompt, then press [#] on the lock keypad to confirm the factory reset.

Activating the Lock

Activate the Lock: After inserting batteries, touch the keypad with your hand or finger. The digits will light up, confirming successful activation.

Registering Administrator

Register First Administrator: On the lock keypad, press [*+#] and enter 123456# to access menu management. Then press 1, then press 1 again to add the first administrator fingerprint or password.

Adding Regular User

Add Regular User: Press [*+#] and enter the admin fingerprint or password. After verification, enter menu management, press 1, then press 2 to add a regular user fingerprint, password, or card.

Deleting User

Press [*+#] and enter the admin fingerprint or password. After verification, enter menu management, press 2, then press 3 to select and delete admins or regular users. Note: deletion requires the user ID number.

Menu Function Programming

Press [*+#] and enter the admin fingerprint or password to access the lock menu programming interface.

Connecting The Smart Lock to App

1. Search for "Tuya Smart" in the app store and download it to your phone. Open the app and log in. If you don't have an account, register using your phone number or email address.
2. To pair the device, connect your smartphone to a secure Wi-Fi network and bring your phone close to the smart lock.

Setup Steps



Step 1: Enable Wi-Fi on the Lock

1. On the lock, press [*+#] and enter the admin fingerprint or password. After verification, press 4, then press 2 for Smart Network Configuration.


Step 2: Connect via App

1. In the app, tap "+" in the top-right corner of the home screen to go to "Add Device".
2. Select [Security Sensor] → tap "Door Lock (Wi-Fi)" → select 2.4GHz Wi-Fi network → enter password → tap [Next] to pair.

Note: Tuya Smart does NOT support 5GHz WiFi. You must use 2.4GHz WiFi.


3. After successful pairing, use the app for remote unlocking, viewing unlock records, and managing user permissions.

Menu Function Programming

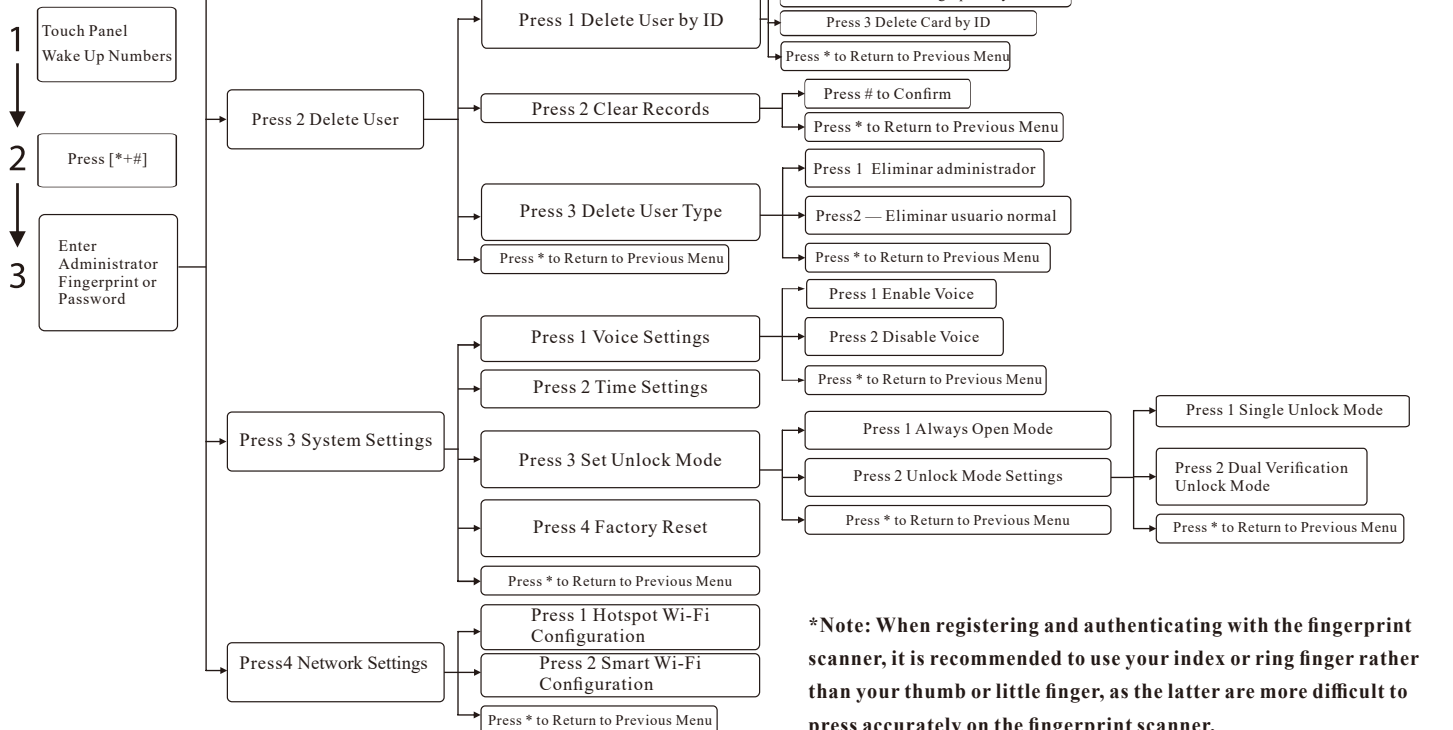


Unlocking Method Instructions

Unlock the Door with Fingerprint:




Unlock via passcode:

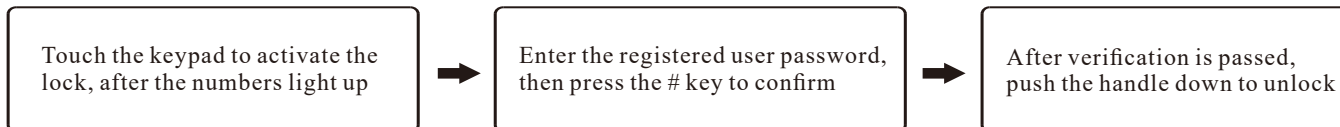


Note: To prevent password leakage, users can enter any random digits before or after the actual password. The maximum length of a random password is 32 characters (including the password itself).

Unlock the door with an IC card:



Request remote door unlocking via APP:



Common Problems and Solutions

Problem	Solution
Door lock does not respond	Check battery polarity and power level; or temporarily supply power via USB port and try to unlock.
Fingerprint recognition fails	Clean the fingerprint sensor, ensure the finger fully covers the recognition area, and try re-enrolling.
Forgot administrator password	Press and hold the reset button to restore factory settings (Note: All user data will be erased).
App cannot complete network pairing	Ensure the phone is connected to 2.4GHz Wi-Fi (5GHz is not supported); Bluetooth is enabled; keep the phone close to the door lock.
Battery depleted, unable to unlock the door	Use the mechanical key to open the door, or temporarily supply power via the USB port to unlock with password/fingerprint, then replace the batteries.

WhatsApp Customer Service: +52 56 1105 8532

Official Website: www.nexido.com

